




Starting up the comfort mode

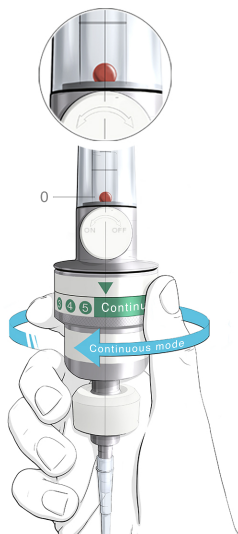

Step 1
Put in continuous mode

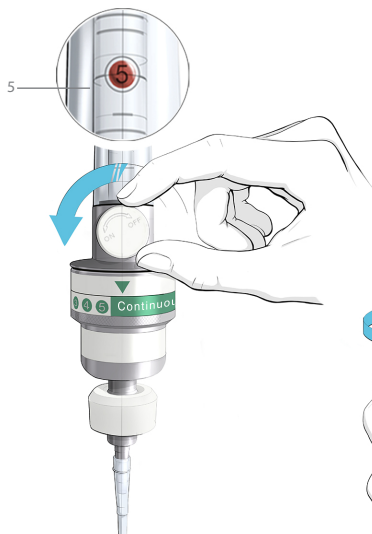

Step 2
Bring ball to 5 L/min

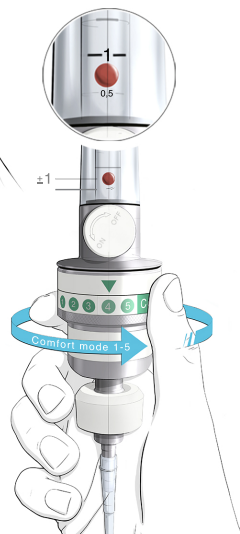

Step 3
Set comfort level 1-5